

Pool Care Instructions

Bumping Filter

1. Turn pump off
2. Open air valve
3. Slowly apply downward pressure on bump handle
(if tough, slowly work it down)
4. Quickly pull up 8-10 times
5. Repeat about 3 times.

To backwash pool

1. Turn off pump
2. Open black air release valve on top of the filter
3. Loosen collar on backwash valve on the back of the filter
4. Turn the valve to the open position
5. When all the water is drained, turn on filter for a few seconds
6. Repeat step 5 till water drains clean, bumping down in between 8-10 times
7. Close valves and turn on. Add 4 coffee cans of earth thru skimmer.

Stripping the filter (breakdown)

1. Turn off pump
2. Open black air release valve.
3. Loosen collar on backwash valve on the back of the filter
4. Turn the valve to the open position, let the water drain out
5. Take off all nuts and bolts on top of the filter
6. Loosen the fitting at the top of the filter all the way
7. Remove top
8. Using a garden hose wash down all of the fingers until clean
9. Put fingers back in and put all the bolts back in and tighten
10. Close air valve
11. Turn on the pump and put in 5 coffee cans of earth

Vacuuming

1. Choose skimmer closest to pump
2. If 2 valves, shut other ½ way
3. If 3 valves, shut one down all the way and the other one ½ way
4. Fill vacuum hose over basket of skimmer, make sure skim vac attach is attached to hose
5. When finished open all valves, make sure filter is running strong